
Windshield Shroud Kit MANUAL

INSTALLATION

- 1. Assemble the lighthead to the plastic shroud with the rubber backing.
- 2. Adjust the angle of the lighthead before fixing it with the provided machine screws (ensure that they are on the same level),
- 3. Choose a mounting area on the windshield that is clear from obstruction to view or interference with driving.
- 4. Clean the mounting area thoroughly with alcohol and remove tape backings before mounting.
- 5. Press the assembly firmly againest the windshield for 1 minute to complete the installation.
- 6. Make wiring according to the lighthead manual.

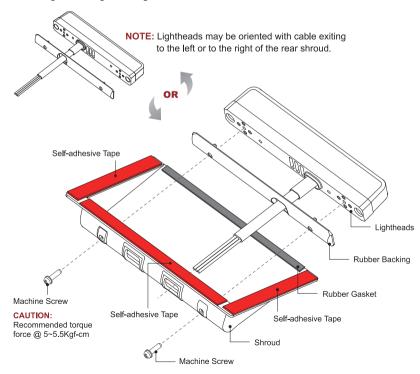

ADJUSTABLE ANGLE Lightheads may be adjust 10 degree up for optimum warning efficiency.